


HANDLING AND STORAGE

Store undercover, and in dry conditions. Handle with care, especially on the edges and corners, which can be damaged if subject to sharp impact. Do not apply excessive pressure, for example by standing or sitting on the product, as permanent damage may be caused.

FACTORYLITE INSTALLATION METHODOLOGY


Tools

Sharp Knife, G-clamps, Galvanised hoop irons
Pop-rivets, Drill, heavy-duty staple gun, 100mm
wire staples

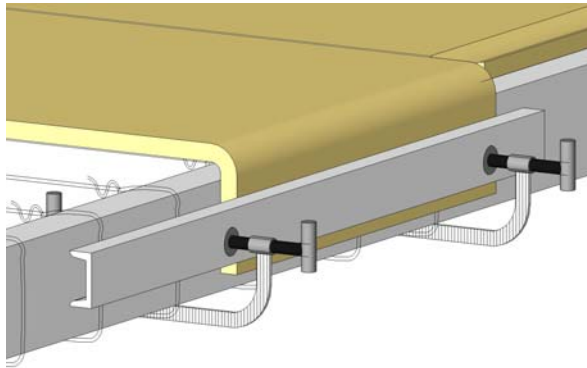


1

- Install straining wires at 300mm centres.
- Using the G-clamp affix Factorylite roll at the apex.
- Unroll the blanket taking out any slack

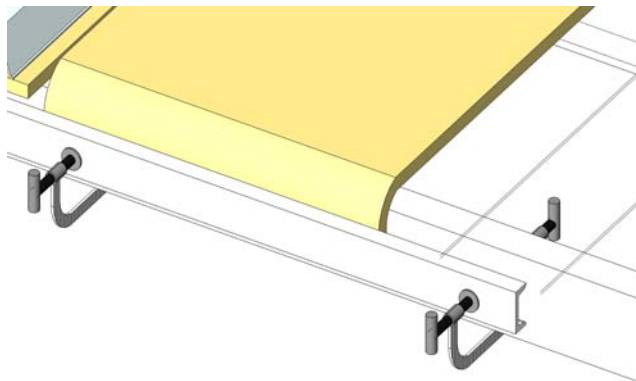


2

- Using the G-clamp affix Factorylite roll at the bottom purlin.

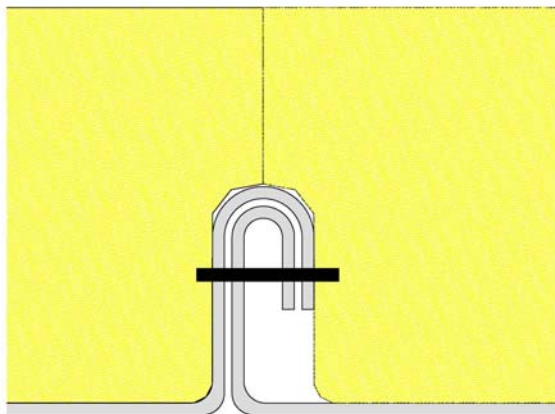

3

- To join the blankets fold-up the overlapping foil edges and staple. Fold the foil over and staple again

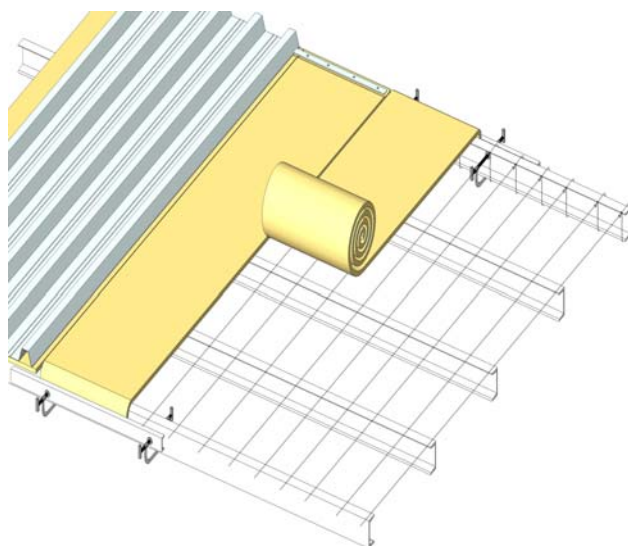

4

- Fix the roof sheeting to the purlins through the Factorylite